



SealMaster[®]
Pavement Products & Equipment

CRACK PRO
HEATED HOSE CONTROL
BOX NO POWER

1. Make sure the Engine is running.

2. Check wiring harness going into the control box for good connection.



3. Check FU1 Fuse inside the control box. If the fuse is bad replace it. If the fuse keeps blowing, check heated hose trigger switch wiring for a short. If the problem persists, call Sealmaster. (800) 395-7325

