




SealMaster[®]
Pavement Products & Equipment

CRACK PRO
HEATED HOSE NON-AIR ENGINE
ENGINE WON'T START OR RUNS SLUGGISH


1. Check fluid levels and make sure fuel and hydraulic tank valves are open.
2. Check in-line fuel filter. If it is dark in color change it. Should be changed every 200 hours.

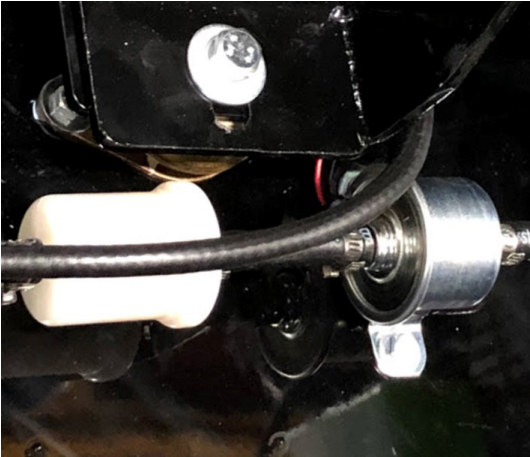

3. Disconnect the temperature sensor. If the engine starts with the temperature sensor disconnected the temperature sensor is bad. Replace it.



4. Disconnect the oil pressure sensor. If the engine starts with the oil pressure sensor disconnected and the oil level is good, the oil pressure sensor is bad. Replace it.

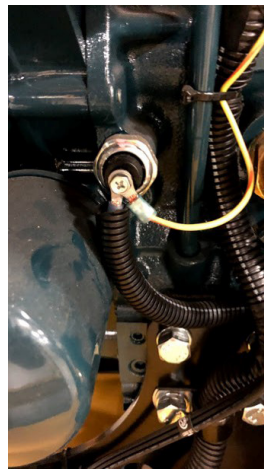

5. Remove air filter and blow out any dust build up with under 30 P.S.I. of air pressure. This should be done every 100 hours and the filter replaced every 850 hours.

